

ASSEMBLING CORD TENSIONER

1. Figure 1 shows the parts required for assembly of the cord tensioner. The bracket and screws are provided in a separate bag.



2. Assemble the spring unit.



ASSEMBLING CORD TENSIONER

3. Push the prongs on the spring unit through the gear assembly. Make sure the slots in the gear wheel align with the prongs, so that the prongs go all the way through.



4. Insert the cord into the gear wheel and thread it all the way around the gear. Then make sure the gear and cord fit neatly into the casing, so that the gear can rotate.



ASSEMBLING CORD TENSIONER

5. Align the holes on the back cover with the prongs and snap the back cover on. Push the button in and make sure that the cord rotates smoothly through the tensioner.

The unit is now ready to be installed to the bracket. Always mount the bracket to the wall before attaching the tensioner to the bracket.

